




# Removing Panasonic DVD-RV31 Player Rear Panel

Taking the back panel off.

Written By: Kevin

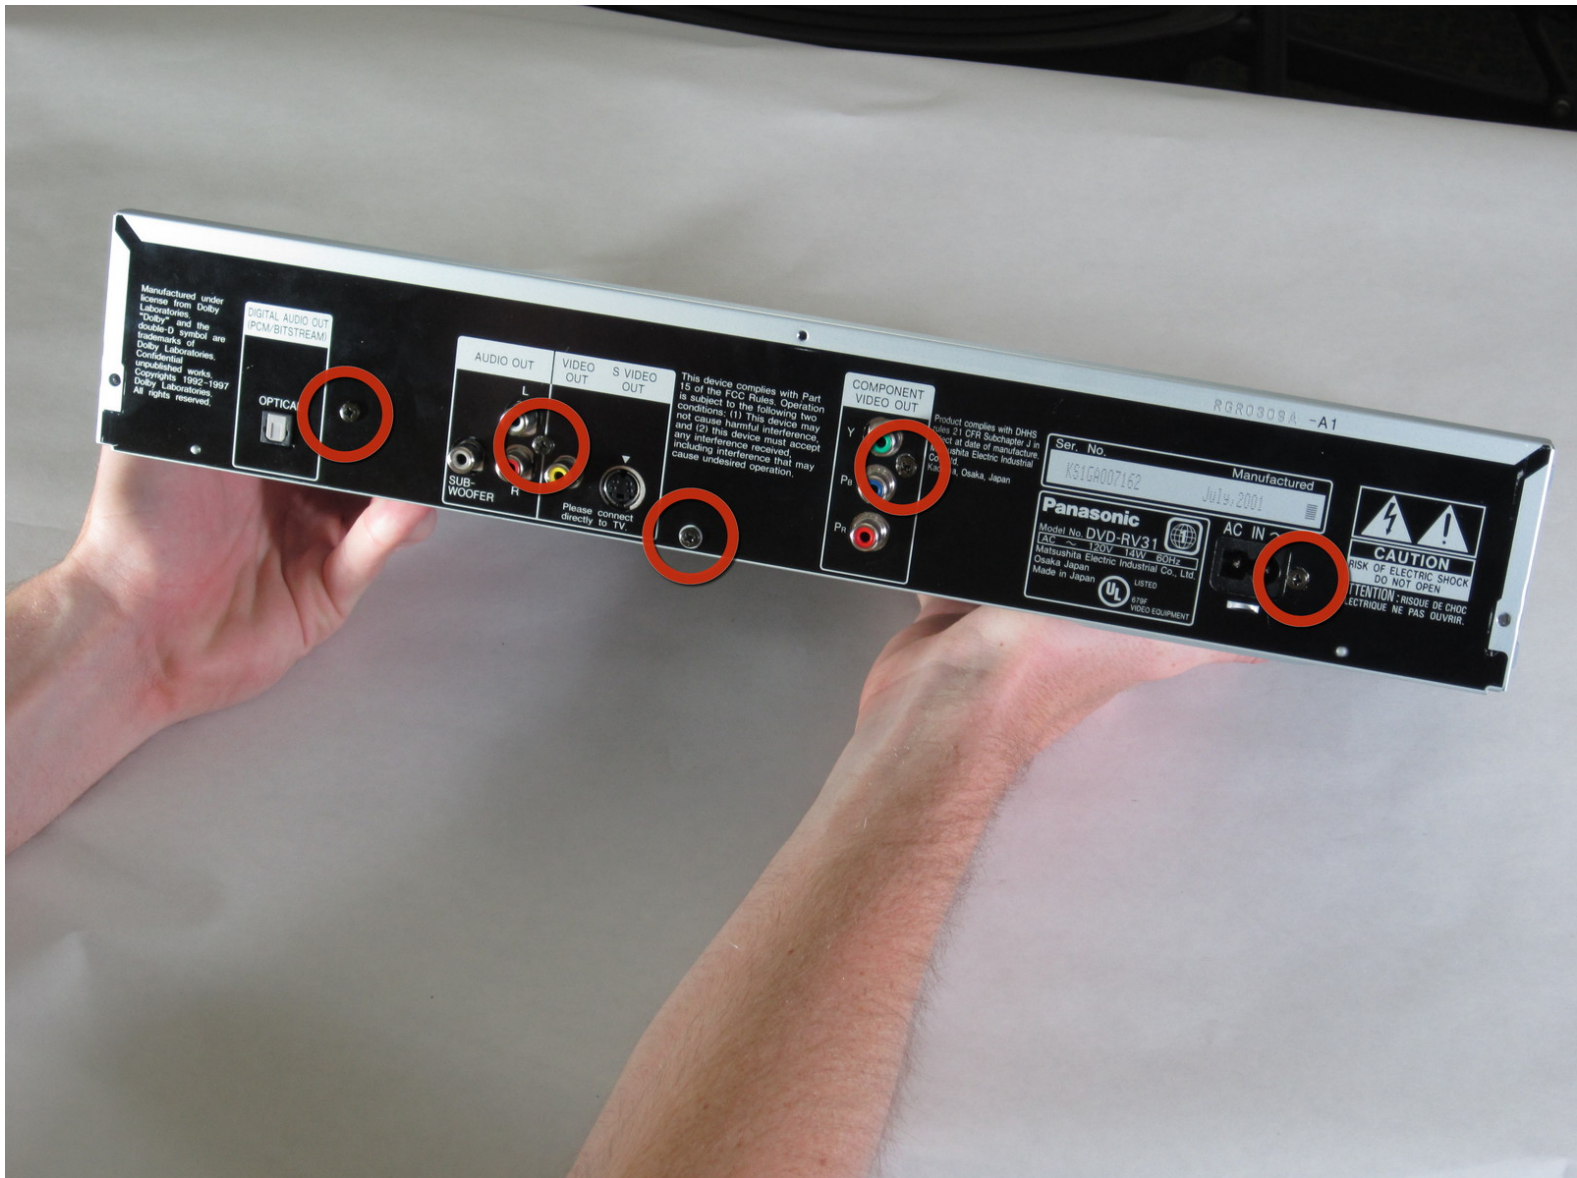

## INTRODUCTION

Outline what you are going to teach someone how to do.

---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Outer Case



- Remove 3 screws running along back edge of case cover.
- Remove 2 screws from each side of case cover.

## Step 2



- Grab edges of cover, pull outward slightly, and pull straight up.





### Step 3 — Rear Panel



- Be sure [case cover](#) has been removed prior to back panel removal.
- Remove 5 screws from panel, as shown.

### Step 4

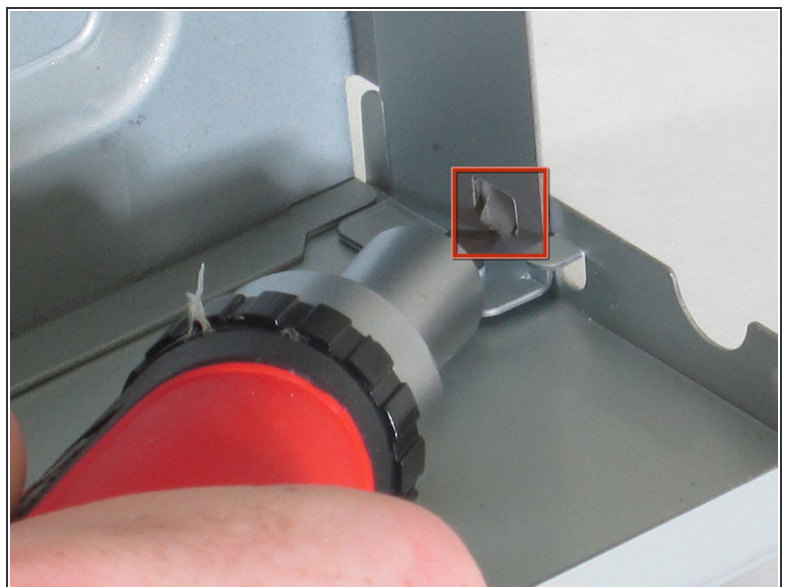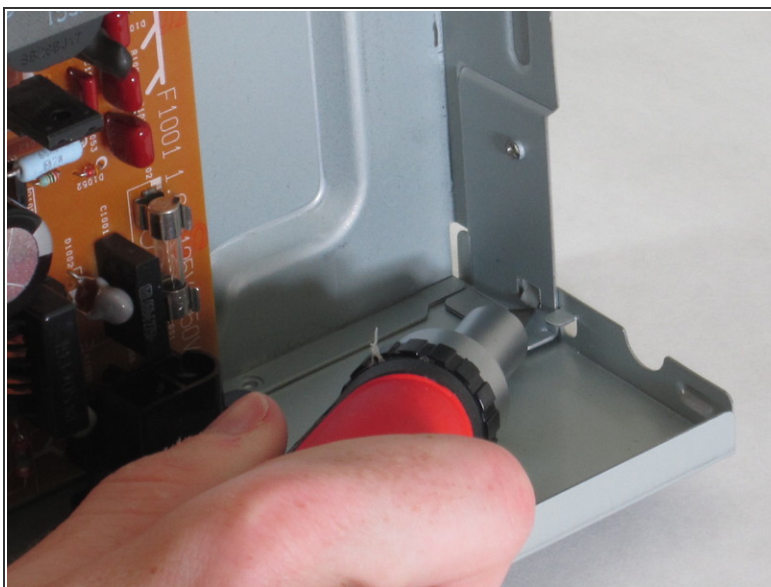

- Use flat-head screwdriver to push in square tabs, located on each side of the back panel.
- Use caution, the edges are sharp.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 12:49:42 PM.